



PAVERS

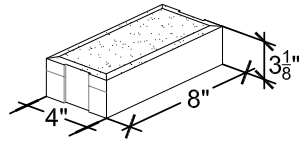

PATTERN PLAN

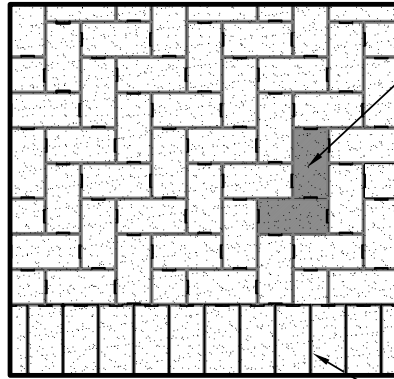


AQUAPAVE STANDARD PAVER
HERRINGBONE PATTERN
BEGIN SETTING PAVERS ON THE #8 BEDDING COURSE AT THE LOWEST POINT OF THE AREA (IF THERE IS A SLOPE) OR AT A SINGLE-CORNER STARTING POINT. WALK ON THE PAVERS AS YOU LAY THEM, NOT ON THE SCREEDED SAND
FILL THE AREA WITH AN INTERLOCKING PATTERN UP TO THE EDGE OF THE RESTRAINT.
CUT OUTER EDGE PAVERS TO FIT SNUGLY INTO THE AREA. A SOLDIER COURSE OF PAVERS IS RECOMMENDED.

SOLDIER COURSE PAVER BORDER

SPECIFICATIONS AND DETAILS FOR BASE COMPACTION AND SUBSURFACE DRAINAGE ARE SITE SPECIFIC AND SHALL PROVIDED BY CIVIL ENGINEER/ GEOTECHNICAL.

AXONOMETRIC

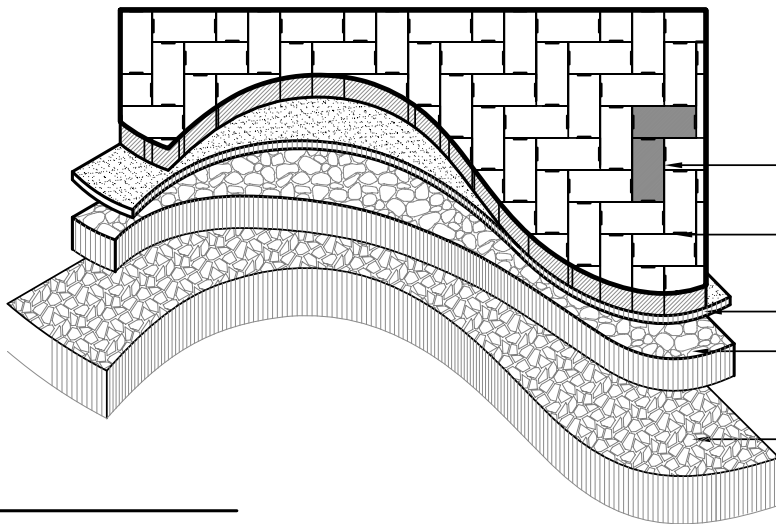

FILL JOINTS WITH AQUAPAVE ENGINEERED JOINT STABILIZER TO INSURE INTERLOCK


AQUAPAVE STANDARD PAVER
HERRINGBONE PATTERN

3/4" OPEN GRADED #8 BEDDING COURSE

6" OPEN GRADED #57 BASE RESERVOIR

DEPTH VARIES, OPEN GRADED #2 SUBBASE RESERVOIR

SECTION

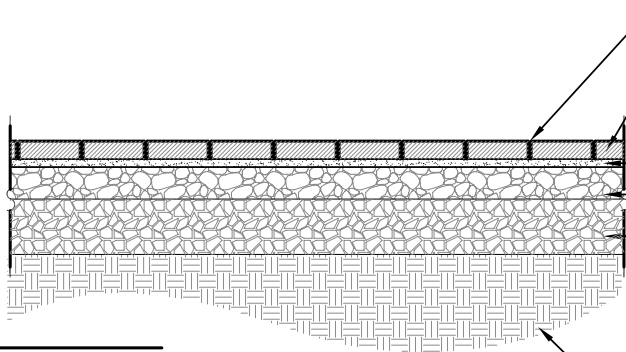

PERMEABLE JOINT MATERIAL

AQUAPAVE STANDARD PAVER
HERRINGBONE PATTERN

3/4" OPEN GRADED #8 BEDDING COURSE

6" OPEN GRADED #57 BASE RESERVOIR

DEPTH VARIES, OPEN GRADED #2 SUBBASE RESERVOIR

UNCOMPACTED SUBGRADE
SEE SPECIFICATIONS

AQUAPave Standard Pavers . HERRINGBONE PATTERN

RED RIVER HARDSCAPES

4235 GUTHRIE HWY. | CLARKSVILLE, TN 37040 | 1.866.694-5326 | www.redriverhardscapes.com

